



# New LMP Contour Map (May 2009)

Go to eSUITE Log-in page <https://esuite.pjm.com/mui/index.htm>

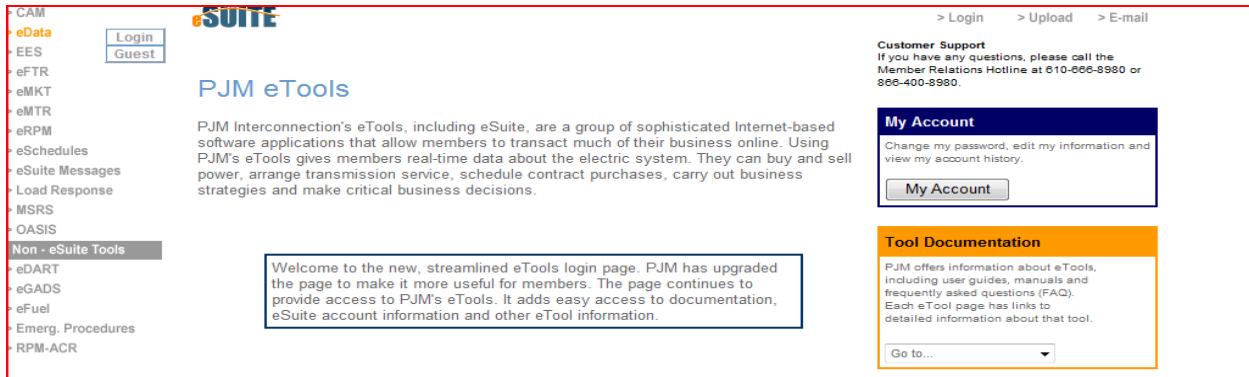

If you have pre-registered for an eData account in CAM, click “eData Login”. in the upper left corner. If you have not pre-registered, click “eData Guest”.

After a few minutes eData will complete the initialization process. Next click the tab labeled “Other” and then select “New Contour Map” from the drop down list.

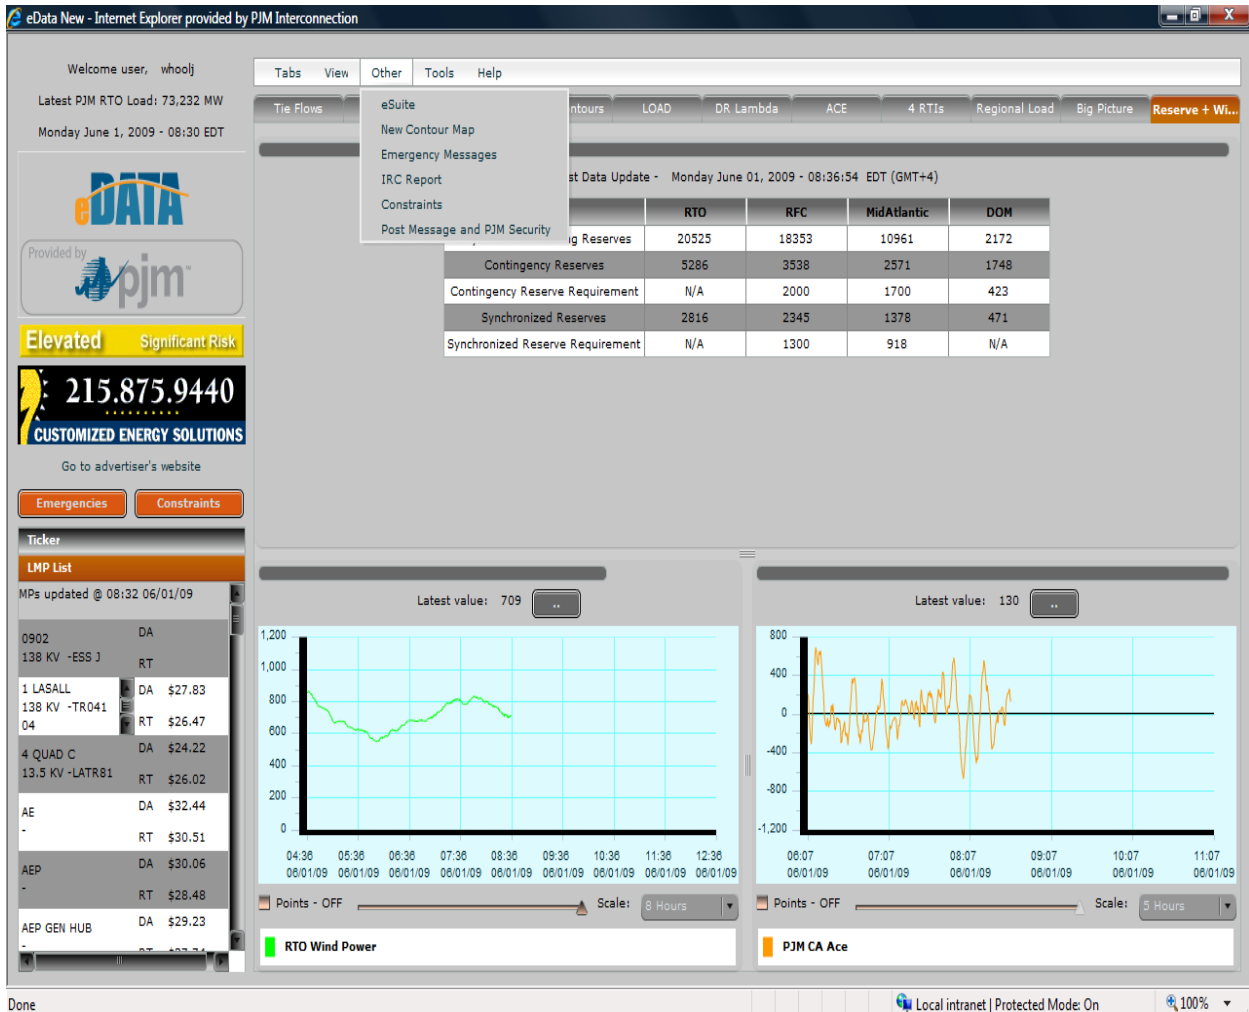


Another window will open that with the new map (after a few seconds of initialization)


Click the arrow next to “Legend” and drag the box over to the right side

The LMP data will be updated every 5 minutes, the same as the old LMP Contour Maps.


There are 5 Types of nodes that can be selected (500 KV, Aggregate, Buss, Hub and Interface). When any Type (or combination of Types) is selected, the symbol will show up on the map and mouse-over will cause a pop-up box to appear that identifies the point and the associated value. ‘Hub’ has been selected in the following example.

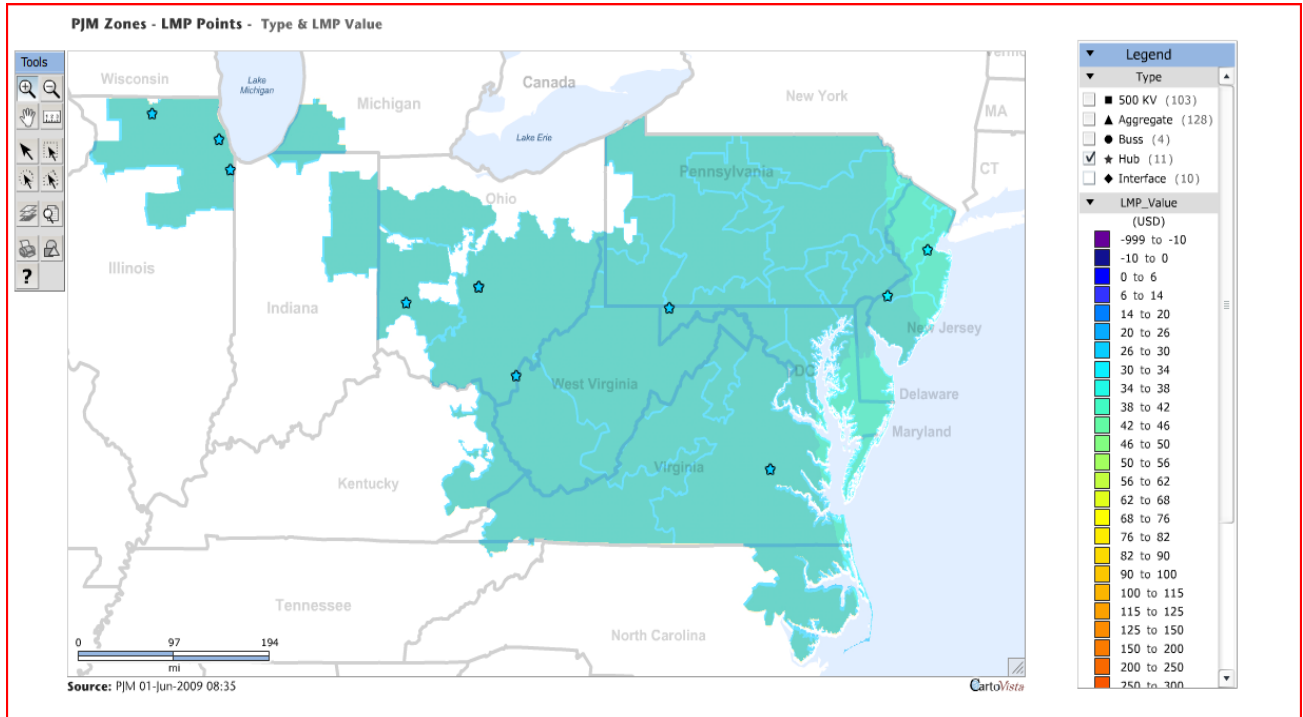

The Map can be transformed to display Zonal LMPs by clicking the bar above the map and picking “PJM Zones”.

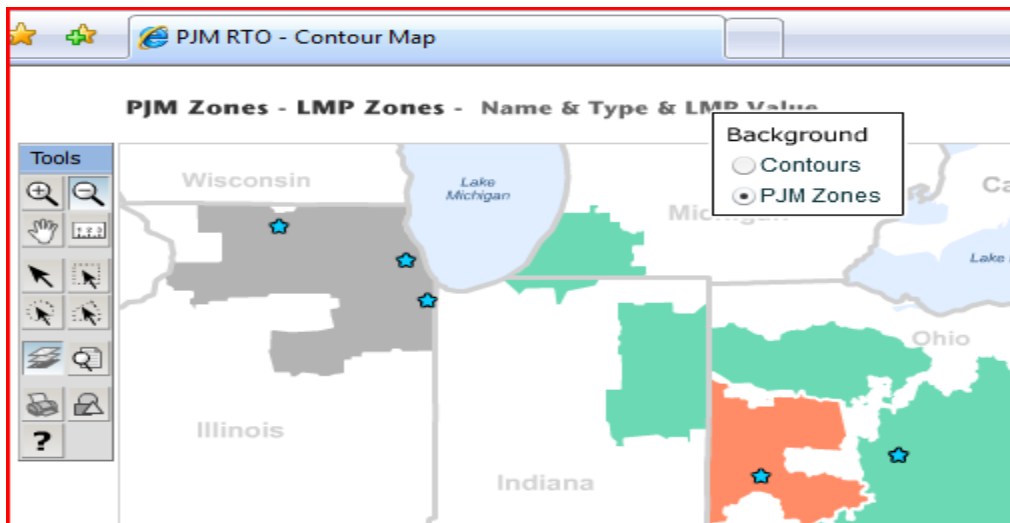

The Zones are color coded (Legend on the right side) and mouse-over will cause a pop-up box to appear that identifies the Zone and the associated value. Selecting 'Type' will position the nodes on the map, but mouse-over works only for the Zones in this mode.

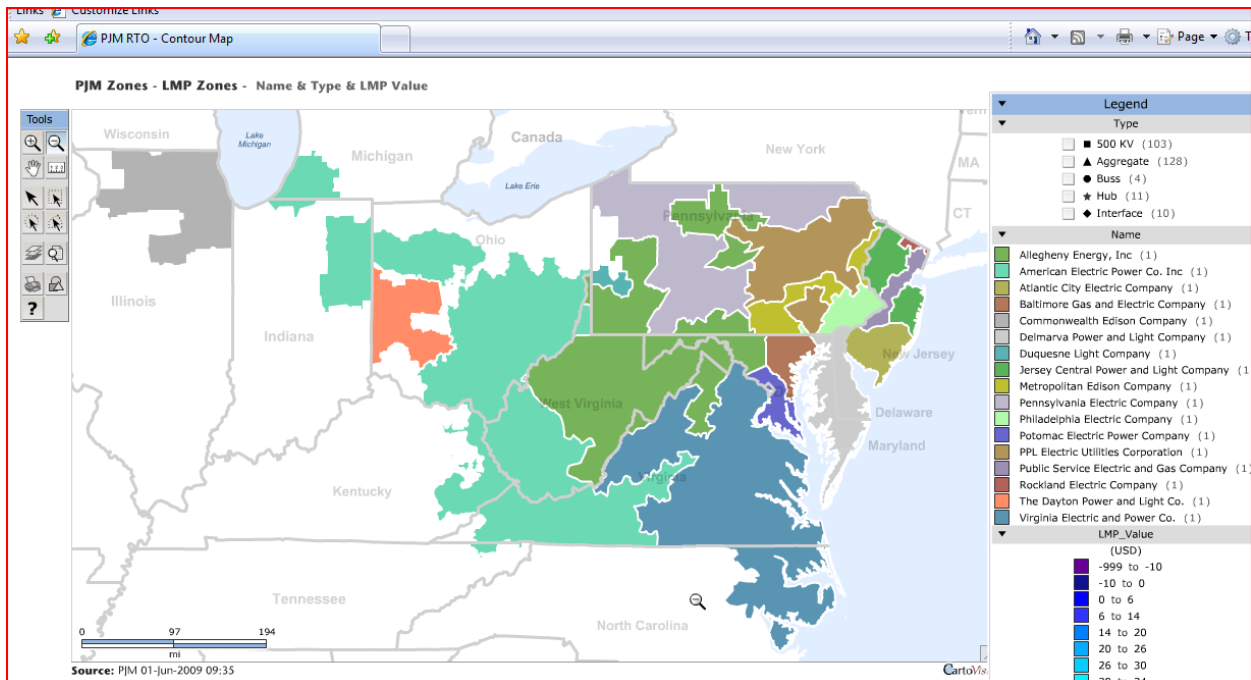

All the mapping "Tools" are selectable from the box in the upper left hand corner. Mouse-over will highlight these functions. Click any "Tool" e.g. "Zoom-In", and the square will be back-lit; then move the cursor to the spot on the map that you wish to explore. (For more detailed documentation click the square and "CartoVista" **HELP** will appear.)

